

# HV-cable connection in ZIF connector outside vessel

ZIF1

	1	2	3	4	5	6	7	8
A	1	2	183	184	95	96	97	98
B	99	10	11	12	13	14	15	16
C	17	18	19	20	21	22	23	24
D	25	26	27	28	29	30	31	32
E	33	34	35	36	37	38	39	40
F	41	42					43	243
G	44	45					245	249
H	46	47					247	246
J	48	49					50	247
K	51	52	53	54	55	56	57	58
L	59	60	61	62	63	64	65	66
M	67	68	69	70	71	72	73	74
N	75	76	77	78	79	80	81	82
P	83	84	85	86	87	88	89	90

ZIF2

	1	2	3	4	5	6	7	8
A	91	92	93	94	95	96	97	98
B	99	100	101	102	103	104	105	106
C	107	108	109	110	111	112	113	114
D	115	116	117	118	119	120	121	122
E	123	124	125	126	127	128	129	130
F	131	132					133	255
G	134	135					251	252
H	136	137					253	250
J	138	139					140	248
K	141	142	143	144	145	146	147	148
L	149	150	151	152	153	154	155	156
M	157	158	159	160	161	162	163	164
N	165	166	167	168	169	170	171	172
P	173	174	175	176	177	178	179	180

ZIF3

	1	2	3	4	5	6	7	8
A	181	182	183	184	185	186	187	188
B	189	190	191	192	193	194	195	196
C	197	198	199	200	201	202	203	204
D	205	206	207	208	209	210	211	212
E	213	214	215	216	217	218	219	220
F	221	222					223	258
G	224	225					260	254
H	226	227					259	256
J	228	229					230	257
K	231	232	233	234	235	236	237	238
L	239	240						
M								
N								
P								

HV cable
Ground

spare

242	sp04	sp03	241	sp01	sp05	sp02
-----	------	------	-----	------	------	------